

Copy switch with 2R panels

2 Wires using built-in dry contact


Do NOT bridge L and C!
Set R1 as momentary

Connect C in Secondary panel
to the common of main panel

and R1 in Secondary panel
to K1 in main panel.

Main - Where the light is connected.

R1 control the light.

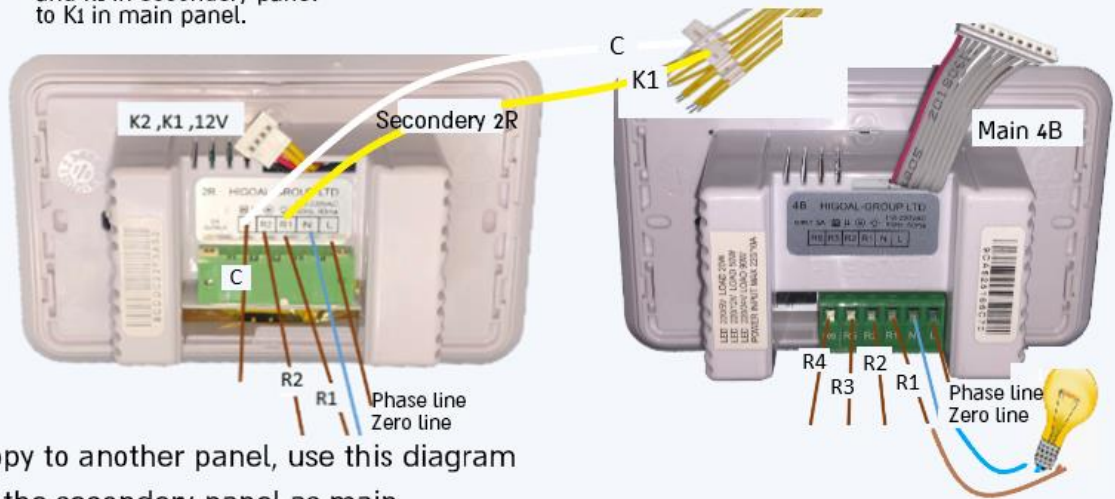

To copy to another panel, use this diagram
With the secondary panel as main.